


AUTOMOTIVE TRANSMISSION VALVE BODY CASE STUDY

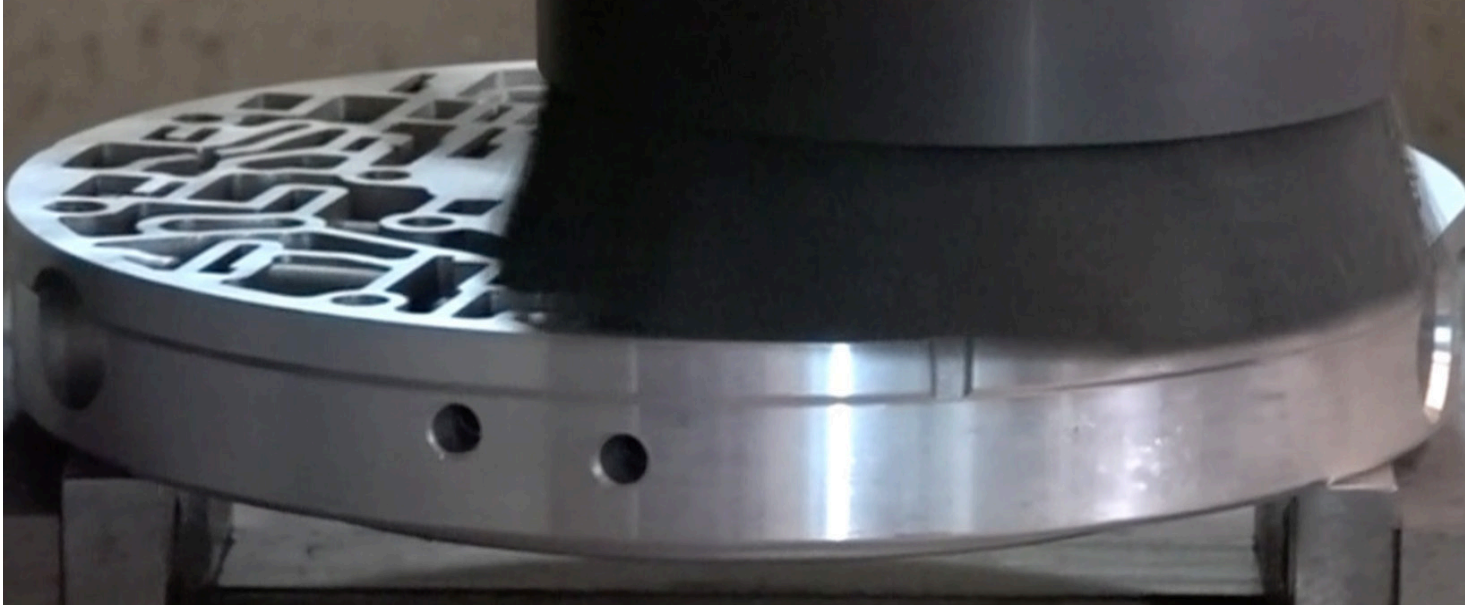

Weiler 8" Burr-Rx[®] Shell Mill Disc Brushes

By utilizing Weiler's Burr Rx technology, we're able to significantly reduce cycle time and consumable costs. This application is done dry, but the Weiler Burr Rx products are also capable of being run in multiple types of coolant, including synthetic, semi-synthetic and oil.

In this example, the brush was run at a surface speed of 2,500 surface feet per min, a traverse rate of 62 inches per min, and a .080 depth of interference.

